

Personalising your Wi-Fi

with your own Wi-Fi name and password


Change your Wi-Fi name and password by logging into your router and changing the settings. It can be easier to remember a personalised Wi-Fi name and password - but remember to set a unique and secure password. Here's what you'll need:



Connect to your Wi-Fi using a laptop / desktop



Using a LAN / Ethernet cable plugged directly into your router from your laptop is preferred

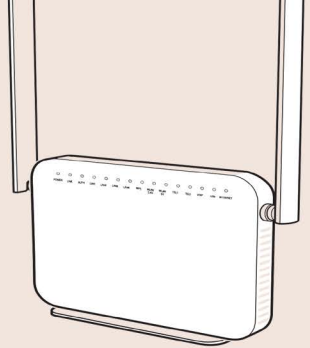

Open your browser.

Type the AdminIP into the browser address bar.



Your **AdminIP** address can be found on the sticker attached to the back or bottom of your router.



Enter your Username and Password on the Login page.

GPON Home Gateway

Username	userAdmin
Password	bnBhsqRZS2
Login Reset	

Your **Username** and **Password** can be found on the sticker attached to the back or bottom of your router.

SSID Configuration

SSID Select	SSID1
SSID Name	ALHN-1212
Enable SSID	Enable
SSID Broadcast	Enable
Port Mode	Route
MAX Users	32
Encryption Mode	WPA/WPA2 Personal
WPA Version	WPA/WPA2
WPA Encryption Mode	TKIP/AES
WPA Key	*****
	☒ Show password
Enable WPS	Disable
Save Refresh	

- > On the Home Gateway page, select Network, then select Wireless (2.4GHz).
- > Enter your Wi-Fi name in the SSID Name field.
- > Enter your password in the WPA Key field.
- > Save!

Remember to reconnect devices that were previously connected, using your new credentials.